


## LIDT pumping down procedure:

- Turn off the flow bench

- Tighten the lock on the chamber door

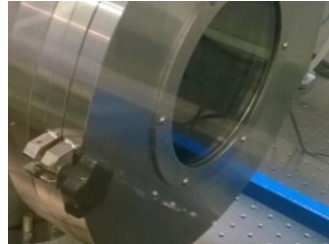

- Tighten the up-to-air valve at the chamber



- Open the valve at the roughing pump if closed
- Turn on the roughing pump (black switch on the back)



- Turn on the turbo pump by pressing star/stop button on the gray controller when pressure reaches about 1 torr



- Tighten the lock on the chamber door more (but not too much)