



## Heater Driver Overview

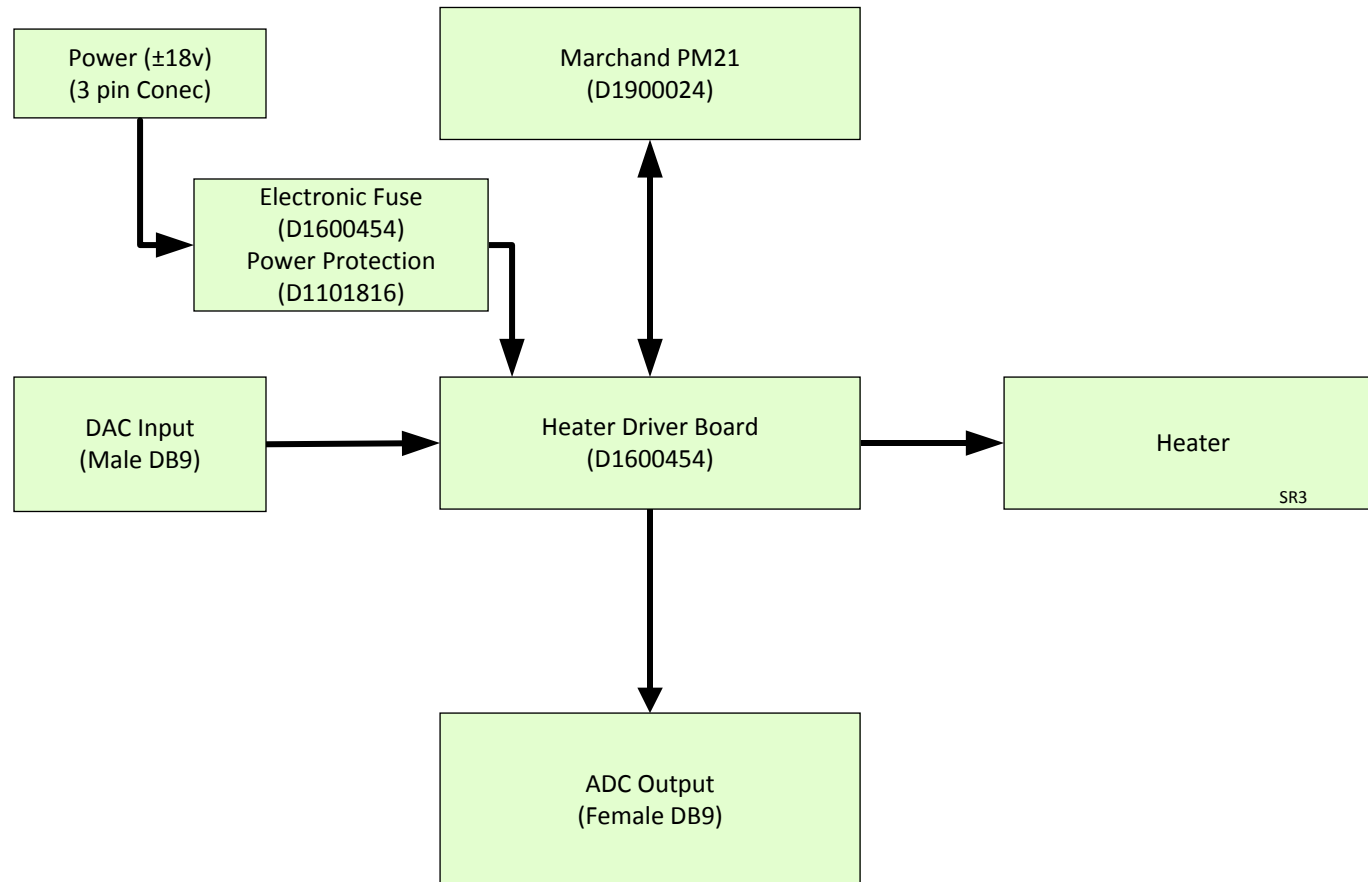

# Heater Driver Board (Circuit Board D1600454)

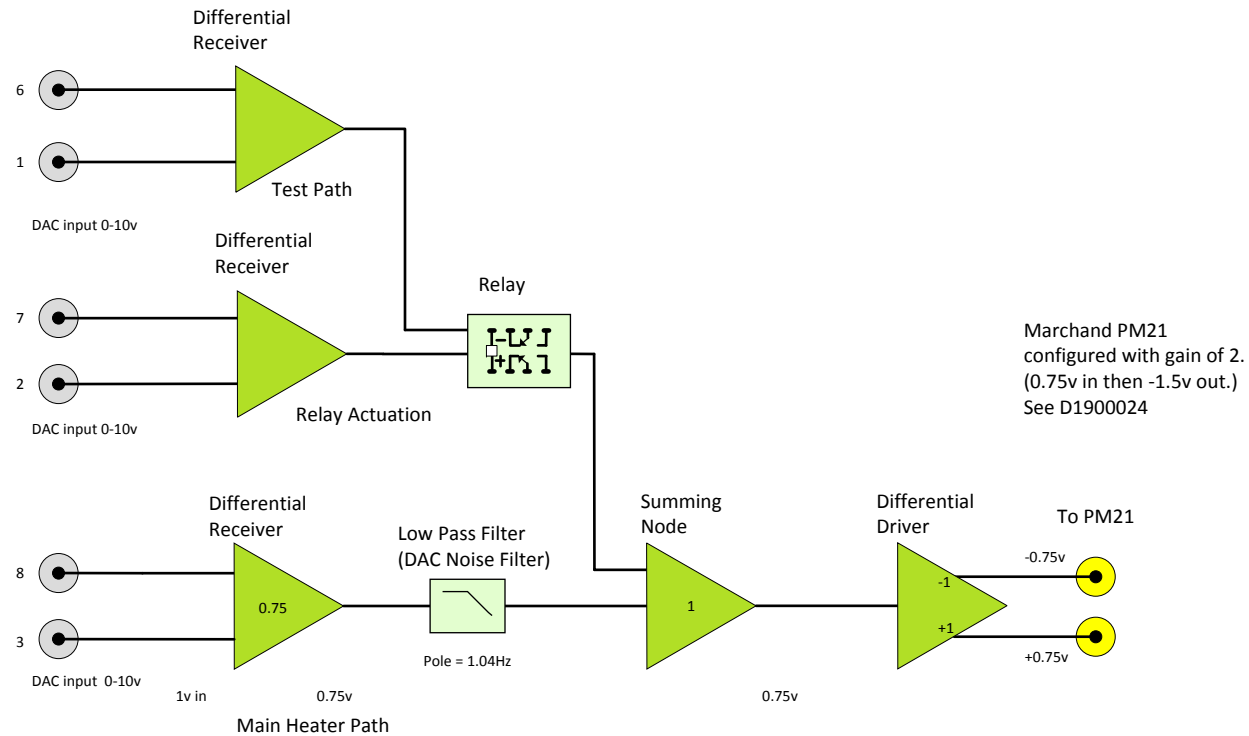


## Key

- BNC Front Panel
- Connection to PM21 input
- Connection from PM21 output
- To Heater
- ADC pin
- DAC pin

# Heater Driver Board (Circuit Board D1600454)

## Current Sense and DC Monitor Wire 1

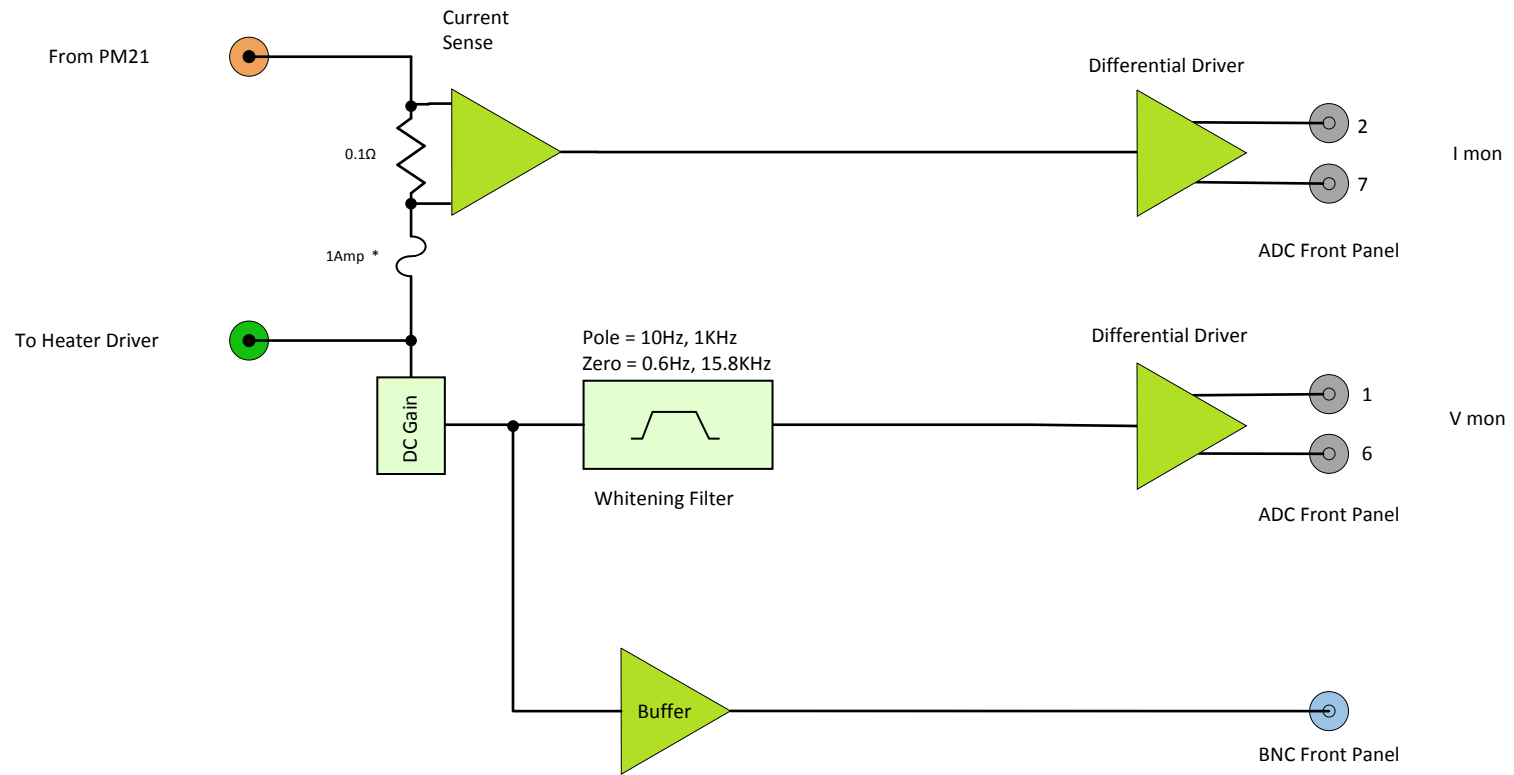


### Key

- BNC Front Panel
- Connection to PM21 input
- Connection from PM21 output
- To Heater
- ADC pin
- DAC pin

\*For BRS,  
use 2.5Amp

# Heater Driver Board (Circuit Board D1600454)

## Current Sense and DC Monitor Wire 2

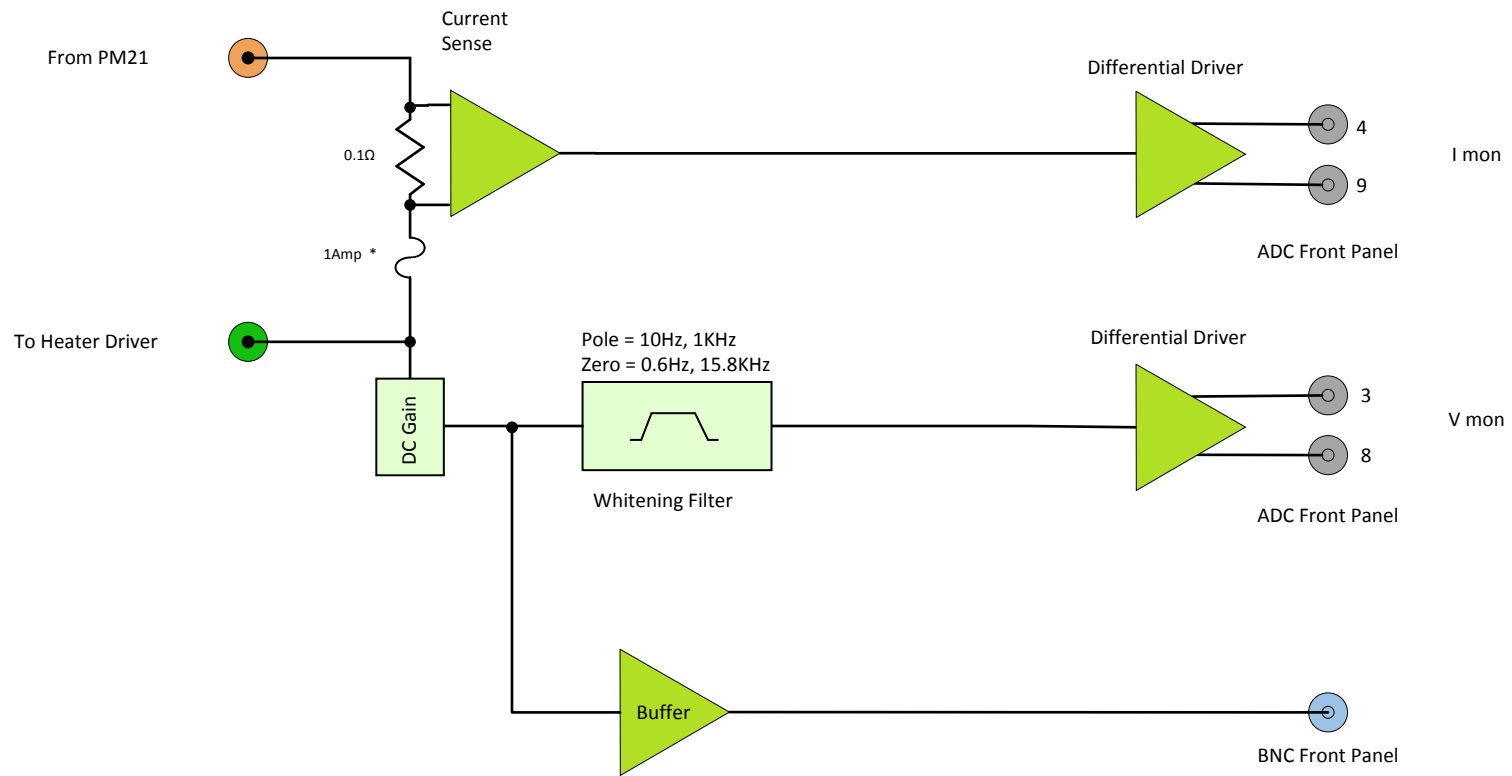

### Key

- BNC Front Panel
- Connection to PM21 input
- Connection from PM21 output
- To Heater
- ADC pin
- DAC pin

\*For BRS,  
use 2.5Amp