



4-40 PEM on this one, insert farside

Part 1

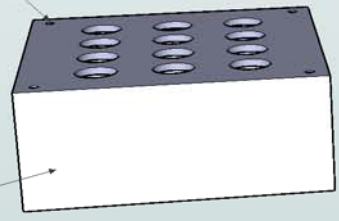

Part 2 (top half)

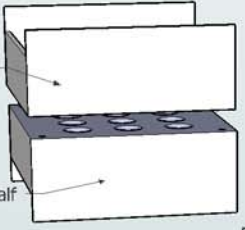

Part 1 bottom half

Showing final orientation of both halves

Drill this one for 4-40 screw clearance

Part 2

