

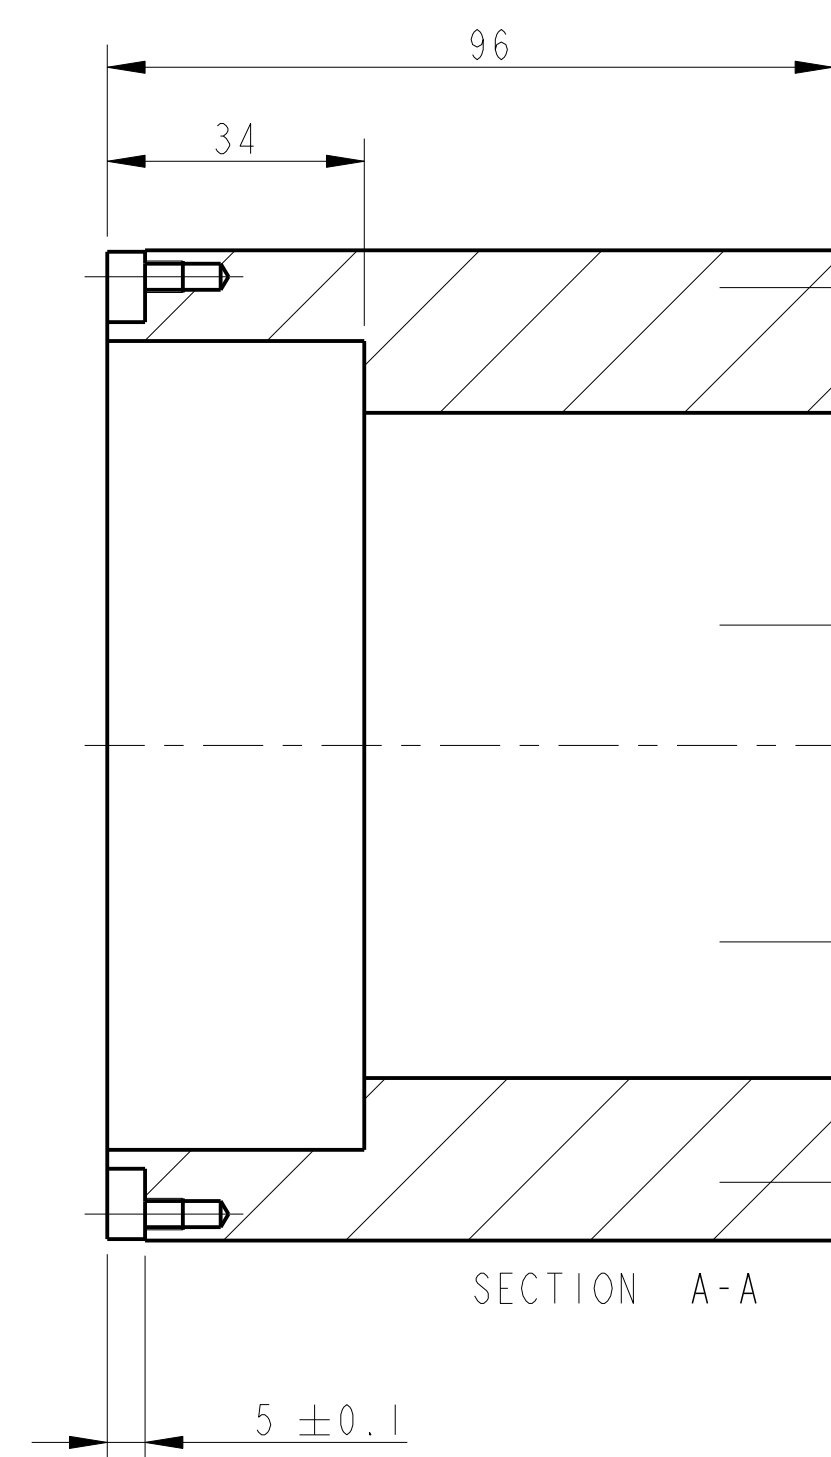


ADDITIONAL NOTES:

- MACHINE ALL SURFACES TO REMOVE OXIDES AND MILL FINISH, USE OF ABRASIVE REMOVAL TECHNIQUES IS NOT ALLOWED.
- ALL PARTS SHALL BE MANUFACTURED IN ACCORDANCE WITH LIGO SPECIFICATION E0900364.
- ALL HELICOIL HOLES TO BE PREPARED ACCORDING TO EMHART HELICOIL PRODUCT CATALOG, HC2000, REV 4.
- ALL MATERIAL IS TO BE VIRGIN MATERIAL (i.e. NOT WELD REPAIRS OR PLUGS UNLESS APPROVED IN ADVANCE IN WRITING BY LIGO, REFER TO LIGO-E0900364.
- NO REPAIRS SHALL BE MADE UNLESS APPROVED IN ADVANCE, AND IN WRITING, BY LIGO LABORATORY. IN GENERAL WELD REPAIRS AND PRESS FIT INSERT REPAIRS ARE NEVER ACCEPTABLE; THE MATERIAL SHOULD BE MADE WITH VIRGIN MATERIAL. SPECIAL CIRCUMSTANCES CAN BE REVIEWED IF/WHEN BROUGHT TO THE ATTENTION OF LIGO CONTRACTING OFFICERS REPRESENTATIVE (COTR) THROUGH A MATERIAL REVIEW BOARD (MRB) PROCESS, REFER TO LIGO-E0900364.

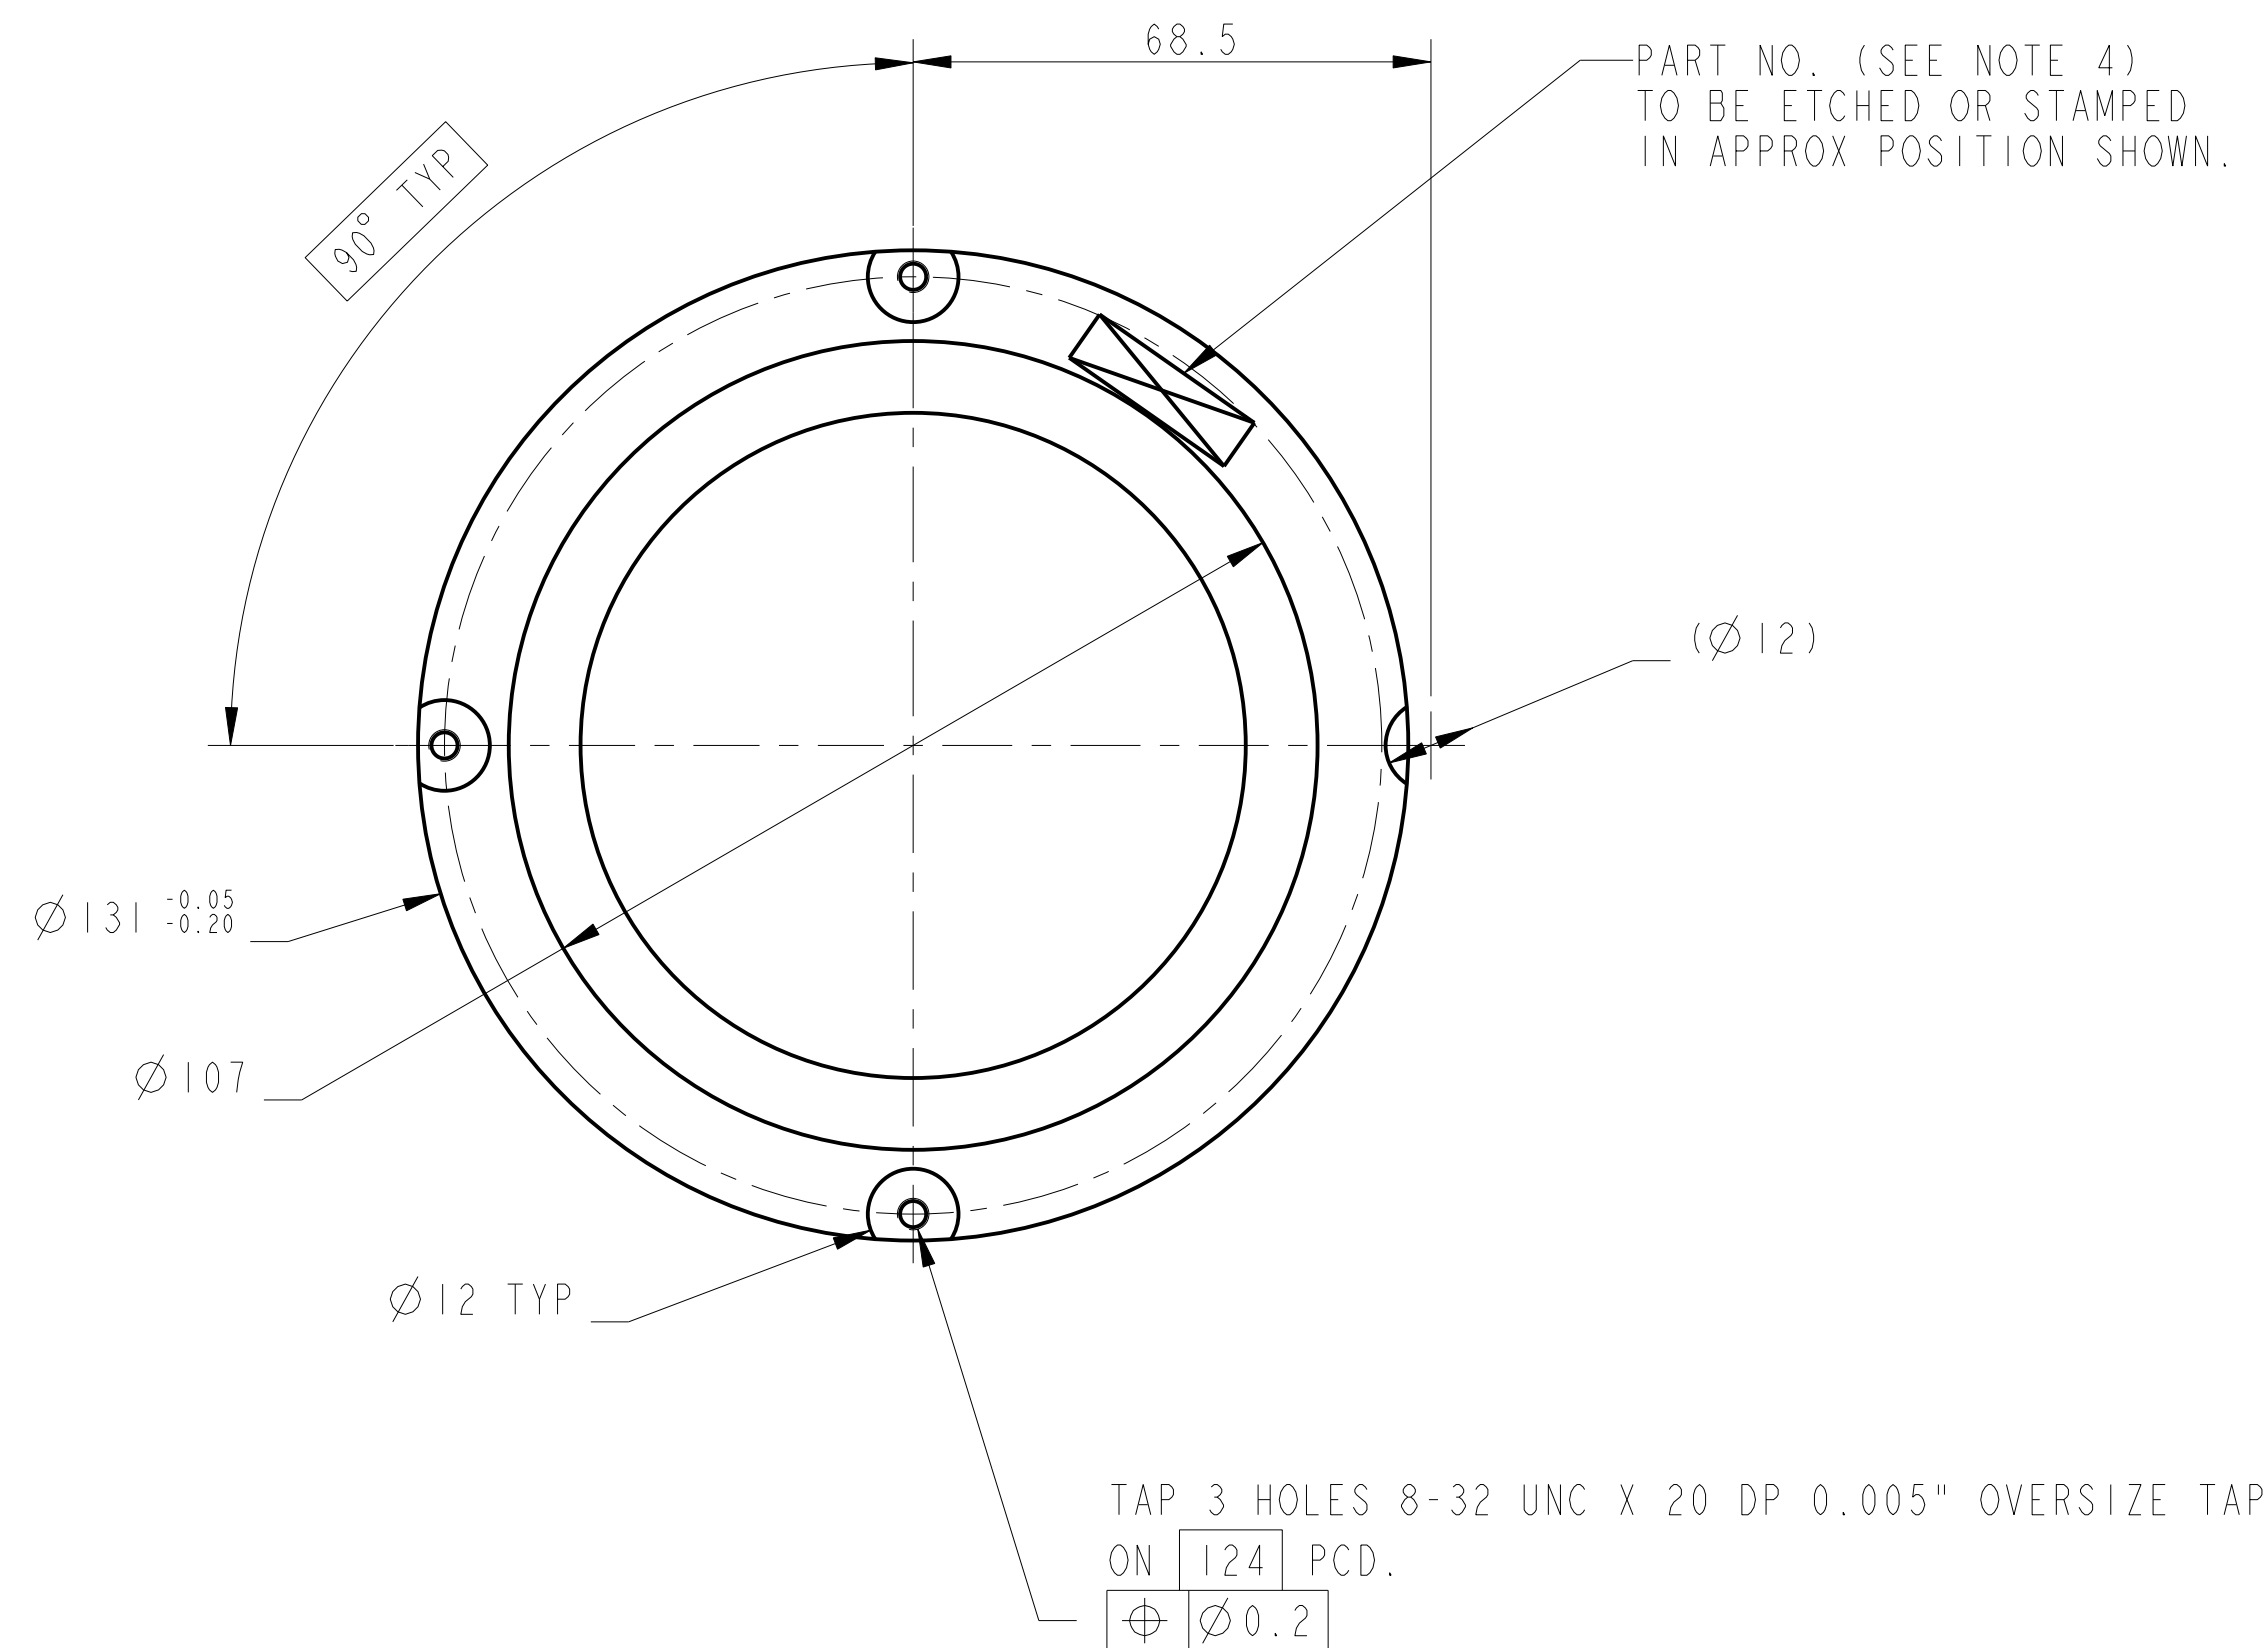

TAP 4 HOLES 8-32 UNC X 20 DP X 0.005" OVERSIZE TAP ON 123 PCD.
 ± 0.2

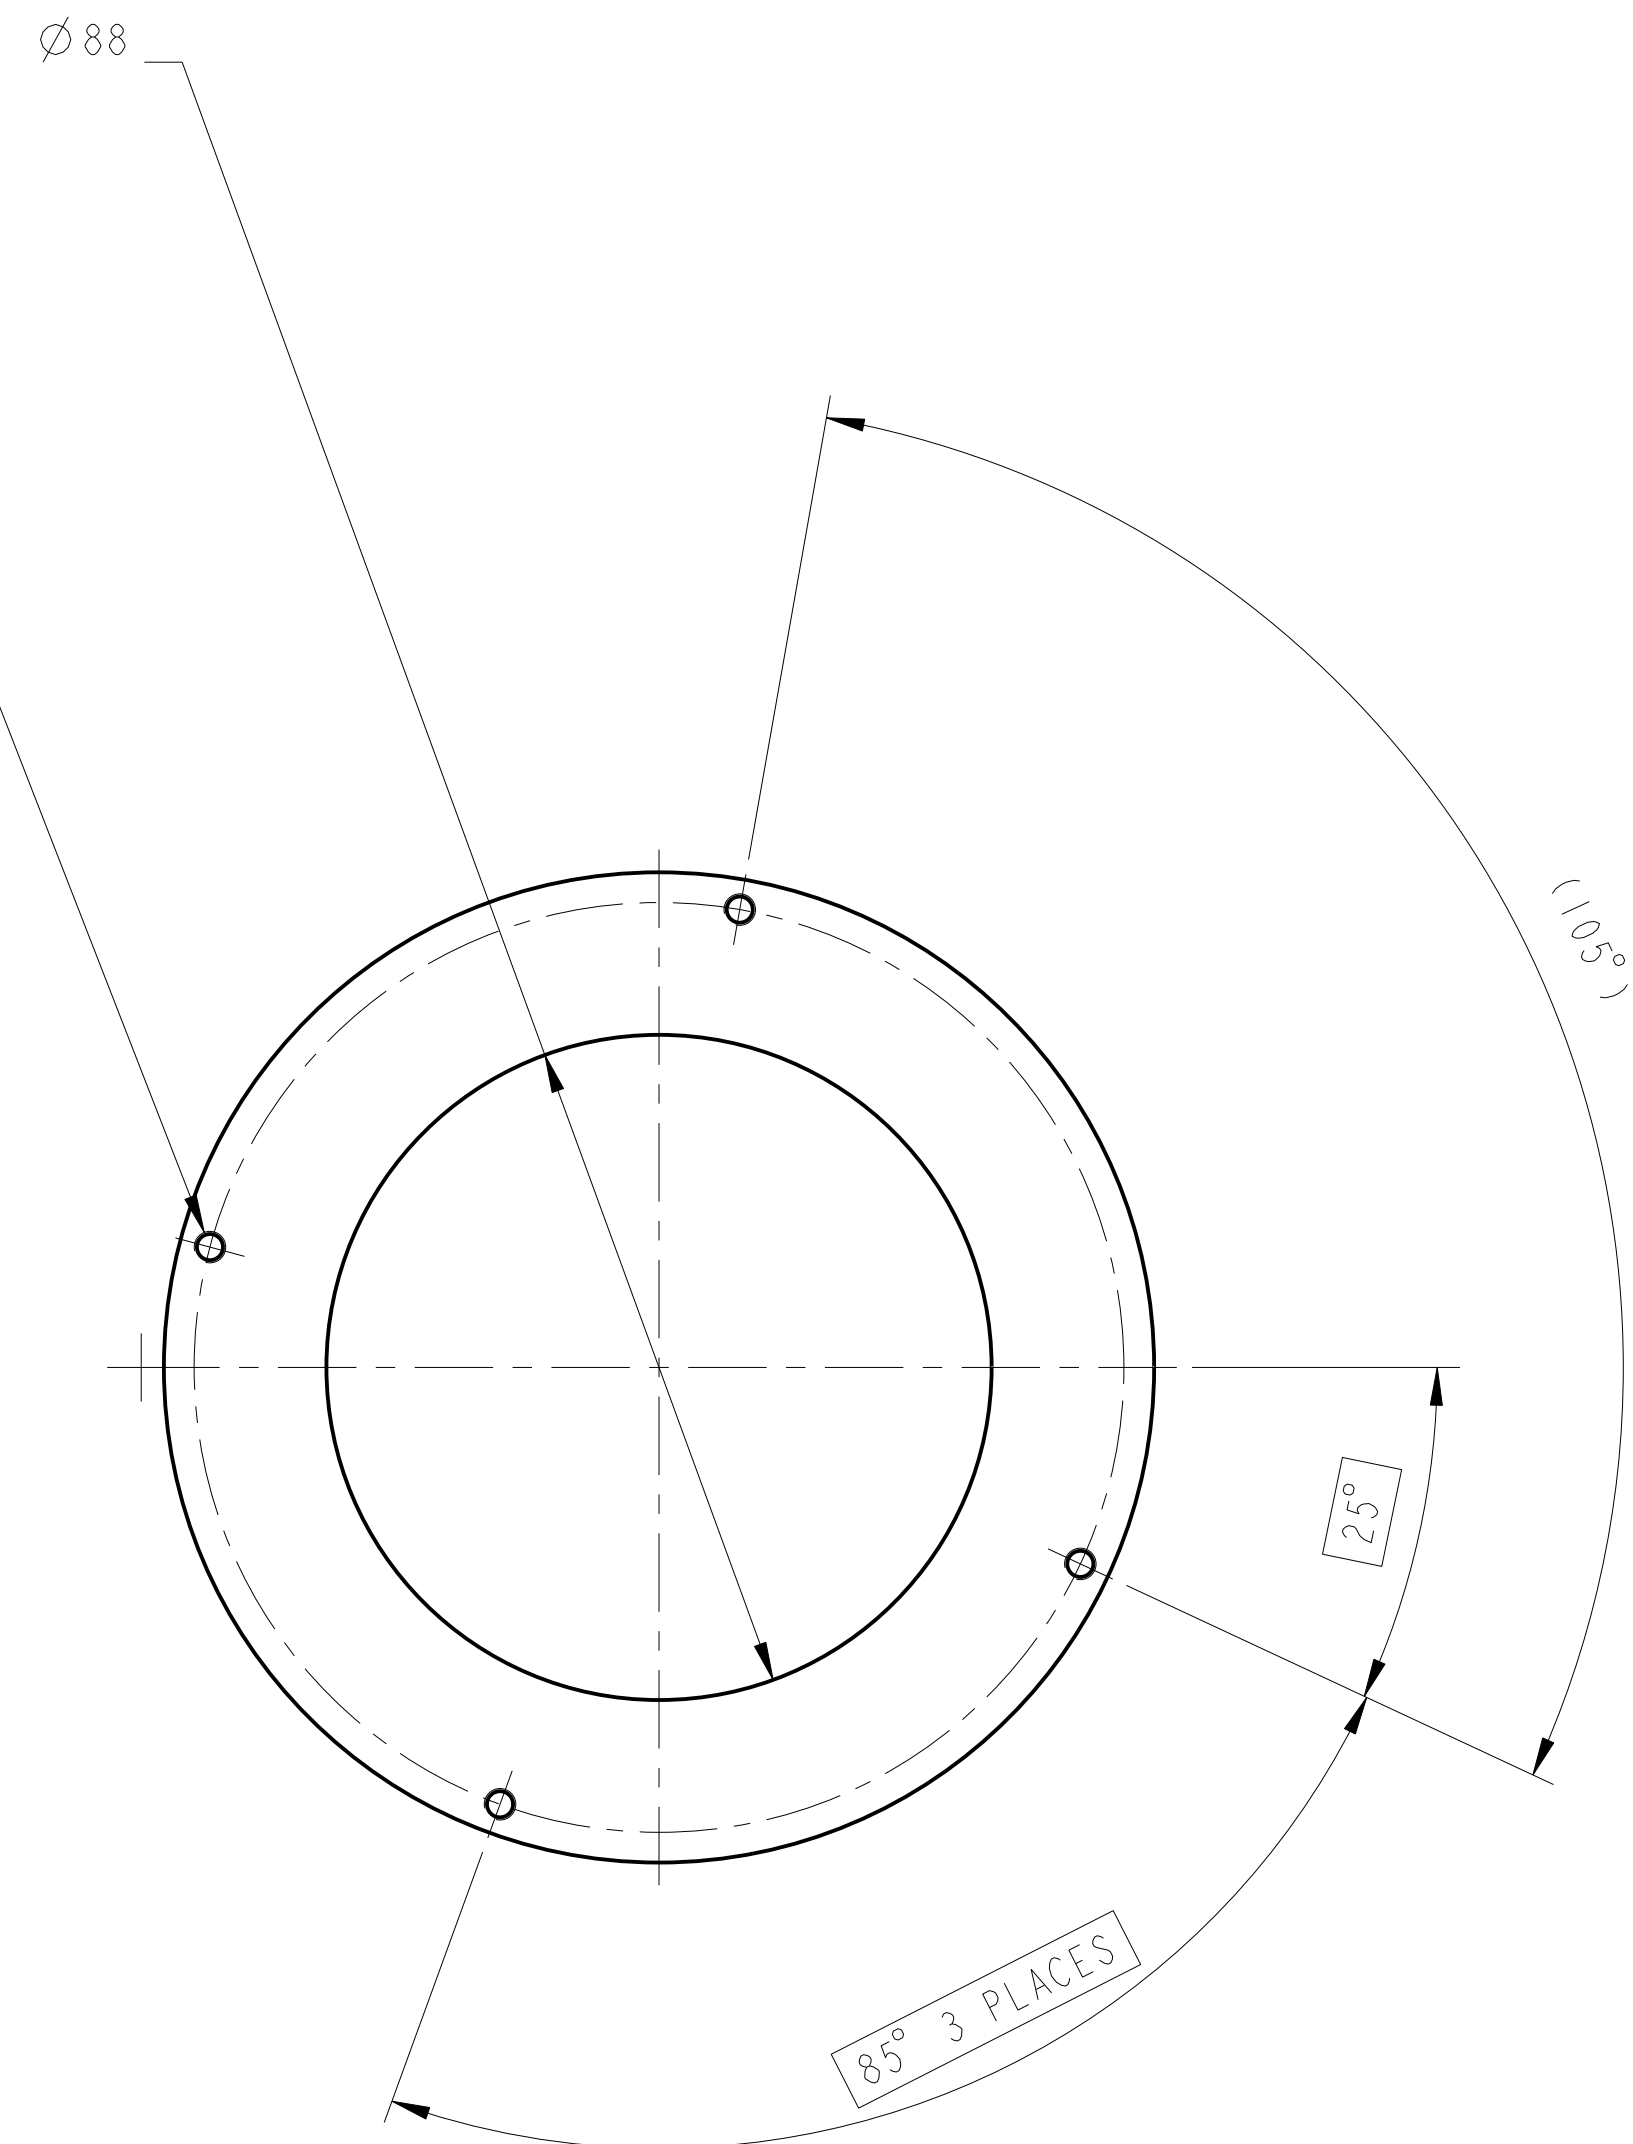

NOTES: (UNLESS OTHERWISE SPECIFIED)		CALIFORNIA INSTITUTE OF TECHNOLOGY MASSACHUSETTS INSTITUTE OF TECHNOLOGY LIGO, GLASGOW UNIVERSITY GEO ROSS GROUP RUTHERFORD APPLETON LABORATORIES	
1. REMOVE ALL SHARP EDGES, R.02 MIN.	2. DO NOT SCALE FROM DRAWING.	3. ALL MACHINING FLUIDS SHALL BE WATER SOLUBLE AND FREE OF SULFUR, CHLORINE AND SILICONE. SUCH AS CINCINNATI MASON'S CIMTECH 410 (STAINLESS STEEL)	4. SCRIBE, ENGRAVE OR STAMP DRAWING PART NUMBER ON NOTED SURFACE OF PART AND A THREE DIGIT SERIAL NUMBER. SERIAL NUMBERS START AT 001 FOR THE FIRST PART AND PROCEED CONSECUTIVELY. USE 01* HIGH CHARACTERS. EXAMPLE: 000010-001: A VIBRATORY TOOL MAY BE USED.
DIMENSIONS ARE IN mm (INCHES) TOLERANCES: X, Y, Z ± .13 ANGULAR ±0.25 °		MATERIAL: ST STEEL 304 OR 316	FINISH: CLEAN, GREASE FREE Ra = 1.6 (63 MICRO-INCH)
SYSTEM: aLIGO		SUB-SYSTEM: SUS	NEXT ASSY: ITM PENRE QUAD
PART NAME: HEAVY ITM CAN BODY		DRG. NO.: D1002200	SCALE: 1:1 PROJECTION: C
DATE: 22/AUG/10	BY: J O'DELL	DATE: 01/DEC/10	BY: J O'DELL
CHECKED: J'00	APPROVED: NAR	DATE: 02/DEC/10	BY: NAR