

**LASER INTERFEROMETER GRAVITATIONAL WAVE
OBSERVATORY**

-LIGO-

CALIFORNIA INSTITUTE OF TECHNOLOGY

MASSACHUSETTS INSTITUTE OF TECHNOLOGY

| | | |
|---|------------|---------------|
| Document Type | DCC Number | July 20, 2011 |
| Common Mode Servo Test Procedure | | |
| Original Author: Modified by: | | |

Distribution of this draft:
This is an internal working note of the LIGO Laboratory

| | |
|---|---|
| <p>California Institute of Technology LIGO Project – MS 18-33 Pasadena, CA 91125 Phone (626) 395-2129 Fax (626) 304-9834 E-mail: info@ligo.caltech.edu</p> | <p>Massachusetts Institute of Technology LIGO Project – MS 20B-145 Cambridge, MA 01239 Phone (617) 253-4824 Fax (617) 253-7014 E-mail: info@ligo.mit.edu</p> |
|---|---|

www: <http://www.ligo.caltech.edu/>

Table of Contents

| | |
|--|----|
| Test Preparation | 3 |
| Required Test and Ancillary Equipment | 3 |
| Important Notes | 4 |
| Tests Part 1 | 5 |
| Power Board Voltage | 5 |
| Power Supplies Test..... | 5 |
| Oscillations..... | 6 |
| Adjust DC Bias..... | 7 |
| Signal Gain..... | 8 |
| Crossbar Switches..... | 10 |
| Excitation A..... | 10 |
| Split..... | 11 |
| Latching..... | 11 |
| Excitation B..... | 12 |
| Limiter..... | 12 |
| Gain Slider C..... | 13 |
| EPICS Readbacks..... | 13 |
| Limit Indicator..... | 14 |
| Tests Part 2 | 14 |
| Important Notes | 14 |
| Power Board Noise..... | 15 |
| Monitor Channel Filtering..... | 15 |
| Adjustment Channel Filtering..... | 16 |
| Distortion..... | 16 |
| Noise Spectra..... | 16 |
| Basic Transfer Functions..... | 17 |
| Transfer Functions of Boost Gain Stages..... | 18 |
| Transfer Functions of DAQ Channels..... | 18 |
| Tests Part 3 | 19 |
| High Frequency Transfer Function..... | 19 |

| | |
|-----------|-----------------------------|
| Author: | Dani Atkinson / Daniel Sigg |
| Refer to: | LIGO-E1100429 |
| Date: | April 29, 2011 |

Common Mode Servo Board Test Procedure

Test Preparation

Enter Name, Date, Revision, Board Serial Number and board to be tested: common mode board (CM), mode cleaner board (**MC**) or an acquisition light system board (**ALS**).

| Test Engineer | Date | Pass |
|----------------|-------------------------------|----------|
| R. Dodd | 21 Sep 11 | |
| Board | Board Serial Number | 51102639 |
| D040180 rev. E | CM or ALS or MC | |

Required Test and Ancillary Equipment

- 1 - Common Mode Board D1003364 Tester
- 1 - Tektronix AFG 3101 Signal Generator or equivalent
- 1 - Tektronix TDS 210 Oscilloscope or equivalent
- 1 - Fluke Multimeter or equivalent
- 1 - HP 4395A Network analyzer (1Hz to 10MHz) or equivalent
- 1 - Stanford Research Systems Signal Analyzer Model SR785
- 1 - GPIB to Cat5 adapter
- 1 - Cat5 cable
- 1 - Laptop using Windows operating system
- 1 - Folder containing Test File Scripts
- 2 - DC Power Supplies (Five Channels Required. Continuous Supply Voltages: +/- 24VDC, +/- 17VDC, and +5VDC)
- 1 - 17VDC Power Cable
- 1 - 24VDC Power Cable
- 1 - 5VDC Power Cable (Banana Plug to Banana Plug Cable and Jumper)
- 1 - custom cable adapting the DB9 Monitor port on the D0901781 front panel into three BNCs. (Refer to Common Mode Board: DAQ, Number D040180 Rev E, Sheet 17 of 17 for DB9 pinout detail)
- 3 - BNC Female to Female Adapters (Barrels)
- 1 - BNC Tee Connector
- 3 - BNC Female to Double Stacking Banana Plugs
- 1 - BNC Male to Mini Grabber Test Leads Cable
- 2 - 50 ohm BNC terminations
- 4 - BNC Male to BNC Male Cables at minimal length

IMPORTANT NOTES:

1. On the Common Mode Servo Tester (D1003364) front panel, all switches must be returned to default positions after each test and/or step, unless otherwise instructed.
2. The default position for most switches is UP, with the exception of switches D22, D25, D28, and D31, which are DOWN.

The switch default positions are shown in Picture 1 below.



Picture 1

Front of D0901781 Common Mode Servo and D1003364 Common Mode Servo Tester in default configuration.

NOTE: Common Mode Servo ALS and MC Variants

1. Unless otherwise marked, nominal values listed are for all boards. Where the ALS and/or MC boards vary from the CM board (black), those values will be **green for ALS** or **red for MC**.

Tests Part 1.

Power Board Voltage (Low Noise Power Circuit Board Assembly D0901846)

Connect +/-17VDC and +/- 24VDC to the Common Mode Servo and +5VDC to the Common Mode Servo Tester.

Turn ON Power Supplies.

On the Low Noise Power Circuit Board Assembly, **Connect** the positive multimeter test lead to the following test points and **Connect** the negative multimeter test lead to GRD.

Record the observed voltages in the data boxes below.

Turn Off Power Supplies.

| TP1 | TP2 | TP3 | TP4 | TP5 | TP6 | TP7 | TP8 | TP9 | TP10 | TP11 | TP12 | TP13 |
|--------|--------|------|------|-------|--------|--------|-----|--------|------|--------|--------|--------|
| +17.06 | -17.14 | 0.00 | 0.06 | +5.03 | -15.00 | +24.04 | 0.0 | -23.99 | 0.00 | +15.00 | +10.00 | -10.00 |
| +17V | -17V | GND | GND | +5V | -15V | +24V | GND | -24V | GND | +15V | +VREF | -VREF |

** Correct voltage indications are: TP14 ~3VDC and front panel OK light lit.

Power Supplies

Turn OFF Power Supplies.

Connect 50 pin Control cables 1 and 2 to corresponding Control Mode Servo Tester and Common Mode Servo jacks.

Turn ON Power Supplies

Check current draw from the ±17V power supply is between 0.3A and 0.6A.

On the front panel of Power Supplies, **Observe** and **Record** the amperage displayed.

| Power supply | Current | Nominal |
|--------------|---------|---------|
| +24V | 0.02 | 0.02 |
| -24V | 0.02 | 0.02 |
| +17V | 0.44 | .45 |
| -17V | 0.54 | .45 |

Oscillations

Connect oscilloscope and **Set** oscilloscope coupling to **AC Coupling**.

Connect oscilloscope probe to the following outputs. Ensure no oscillating wave forms are observed.

Place checkmark in corresponding box below each output.

| Outputs | OUT1 | OUT2 | SERVO | A:TST1 | A:TST2 | B:TST1 | B:TST2 |
|----------------|---------------------|---------------------|--------------------|-----------------------|----------------------|---------------|---------------|
| CheckBox | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Outputs | D32 Input Mon | D33 Split Mon | D34 Fast Mon | D39 Slow FB Mon | D40 Output Mon | | |
| CheckBox | ✓ | ✓ | ✓ | ✓ | ✓ | | |
| Outputs | IMON | FMON | SMON | | | | |
| CheckBox | ✓ | ✓ | ✓ | | | | |

Adjust DC Bias

Set Oscilloscope coupling to **DC Coupling**.

Connect Input Mon (D32) and Offset Adj. (D36) to the oscilloscope.

Ground IN1 using a BNC 50 ohm termination.

Adjust DC bias (R54) for zero volts observed at Input Mon (D32) ensure D32 remains zero when D36 is removed.

Connect FB Mon (D39) and Offset Adj. (D37) to oscilloscope.

Adjust R137 to zero volts observed at FB Mon (D39) when D37 is removed.

Connect OUT1 to oscilloscope.

Turn ON D15 (switch down).

Adjust R54 for zero volts observed.

Return D15 to default position.

Turn ON D16 (switch down).

Adjust R54 for zero volts observed.


Turn ON D15 and D16.

Adjust R54 for zero volts observed at OUT1.

Return switches to default positions.

Record observations below.

| | |
|--|----------|
| Zero D32 via R54. | 0.00 VDC |
| Zero D39 via R137. | 0.00 VDC |
| Zero OUT1 via R54 with D15 enabled. | 0.00 VDC |
| Zero OUT1 via R54 with D16 enabled. | 0.00 VDC |
| Zero OUT1 via R54 with both D15 and D16 enabled. | 0.00 VDC |

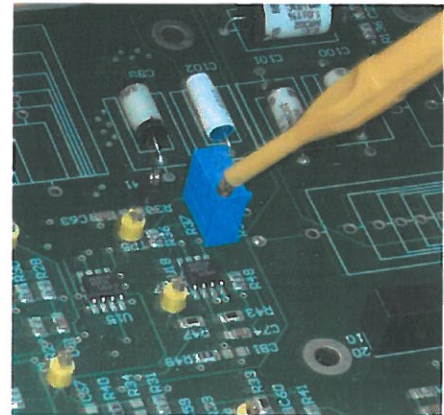

Picture 2

Signal Gain

Gain slider A (Gain IN1):

Toggle switch D14 **Down** (IN1 position).

Connect OUT1 to the oscilloscope.

Connect Function Generator Output to Common Mode Servo IN1 jack.

Set Function Generator to frequency 100Hz, **Sine wave** and an Amplitude of 1 Vpp.

Inject a 100Hz / 1Vpp **Sine wave** signal. Adjust oscilloscope SEC/DIV until sine wave appears.

Measure the voltage at 0dB (all switches in default position) and **Record**.

Individually, **Toggle** each switch down (GND) and **Record** observed voltage. After each voltage observation, **Return** the switch to default position.

Continue to **Toggle** each switch, **Record** the observed voltage and **Return** each switch to default position.

Return D14 to the default position.

** Tolerance is +/- 0.5dB.

| Binary input (Switch Setting) | Measured Vp | Nominal Vp |
|-------------------------------|-------------|------------|
| —(0dB) | 0.96 | 1 |
| D0 (1dB) | 1.07 | 1.12 |
| D1 (2dB) | 1.19 | 1.26 |
| D2 (4dB) | 1.51 | 1.59 |
| D3 (8dB) | 2.36 | 2.51 |
| D4 (16dB) | 6.00 | 6.31 |
| D3 & D4 (24dB) | 11.20 | 15.9 |
| D5 (-32dB) | 0.0246 | 0.025 |
| D5 & D3 (-24dB) | 0.0605 | 0.063 |
| D5 & D4 (-16dB) | 0.150 | 0.159 |
| D5 & D3 & D4 (-8dB) | 0.374 | 0.398 |

Gain slider B (Gain IN2):

Toggle switch D13 down (D14 is in the default position IN2).

Connect OUT2 to an oscilloscope.

Connect Function Generator Output to Common Mode Servo IN2 jack.

Set Function Generator to frequency 100Hz, **Sine wave** and an Amplitude of 1 Vpp.

Inject a 100Hz / 1Vpp **Sine wave** signal into IN2.

Measure the voltage at 0dB (all switches in default position) and **Record**.

Toggle each switch individually **Down** (GND) and **Record** observed voltage. **Return** the switch to default position.

Continue to **Toggle** each switch, **Record** the observed voltage and **Return** each switch to default position.

Return D13 to the default position.

** Tolerance is +/- 1.059 V (+/-0.5dB).

| Binary Input (slider gain) | Measured Vp | Nominal Vp |
|----------------------------|-------------|------------|
| — | 1.01 | 1 |
| D6 (1dB) | 1.13 | 1.12 |
| D7 (2dB) | 1.25 | 1.26 |
| D8 (4dB) | 1.59 | 1.59 |
| D9 (8dB) | 2.48 | 2.51 |
| D10 (16dB) | 6.30 | 6.31 |
| D9 & D10 (24dB) | 14.10 | 15.9 |
| D11 (-32dB) | 0.026 | 0.025 |
| D11 & D9 (-24dB) | 0.0635 | 0.063 |
| D11 & D10 (-16dB) | 0.159 | 0.159 |
| D11 & D9 & D10 (-8dB) | 0.394 | 0.398 |

Crossbar switches

Inject a 100Hz/1Vpp **Sine wave** to IN1. Individually, **Toggle** each Crossbar switches **Down**. Using an oscilloscope, **Record** the voltage states at OUT1 and OUT2. Voltage states are either **ON** or **OFF**.

| Binary input | OUT1 | Nominal | OUT2 | Nominal |
|-------------------------------|------------|---------|------------|---------|
| Switches in Default Positions | <i>ON</i> | On | <i>off</i> | Off |
| D12 (input 1 disabled) | <i>off</i> | Off | <i>off</i> | Off |
| D13 (input 2 enabled) | <i>ON</i> | On | <i>off</i> | Off |
| D14 (output switch) | <i>ON</i> | On | <i>ON</i> | On |

Inject a 100Hz/1Vpp **Sine wave** to IN2. **Record** the voltage states at OUT1 and OUT2 while toggling the switches **Down**. Voltages states are either **ON** or **OFF**.

| Binary input | OUT1 | Nominal | OUT2 | Nominal |
|-------------------------------|------------|---------|------------|---------|
| Switches in Default Positions | <i>off</i> | Off | <i>ON</i> | On |
| D12 (input 1 disabled) | <i>off</i> | Off | <i>ON</i> | On |
| D13 (input 2 enabled) | <i>ON</i> | On | <i>ON</i> | On |
| D14 (output switch) | <i>off</i> | Off | <i>off</i> | Off |

Excitation A

Inject a 100Hz/1Vpp **Sine wave** to IN1. **Measure** and **Record** the voltage at A:TEST1 and A:TEST2. ** Tolerance is +/-0.5dB.

| Binary input | A:TEST1 | Nominal Vp | A:TEST2 | Nominal Vp |
|---------------------|--------------|------------|-------------|------------|
| Switches in Default | <i>-1.00</i> | -1.00 | <i>1.00</i> | 1.00 |

Inject a 100Hz/1Vpp **Sine wave** to A:EXC. **Measure** and **Record** the voltage at A:TEST2 and OUT1. ** Tolerance is +/-0.5dB. (**Red = MC**)

| Binary input | A:TEST2 | Nominal Vp | OUT1 | Nominal Vp |
|------------------------|--------------|------------|--------------|--------------------|
| Default | <i>off</i> | Off | <i>off</i> | Off |
| D18 (com exc enable) | <i>-0.10</i> | -0.10 | <i>-0.10</i> | 0.10 / 0.50 |
| D18 & D19 (com option) | <i>-0.10</i> | -0.10 | <i>off</i> | Off |

Split

Set O'scope to DC coupling. Inject a 100Hz/1Vpp Sine wave to IN1. Measure and Record the voltage at OUT1 and SERVO while toggling the switches **Down**. ** Tolerance is +/-0.5dB.

| Binary input | OUT1 | Nominal Vp | SERVO | Nominal Vp |
|------------------------------|-------|--|-------|------------|
| — | -1.00 | -1.00/ -5.0 | -1.00 | -1.00 |
| Lift D22 (disable fast) | -1.00 | -1.00/ -5.0 | off | Off |
| D21 (common filter) | -1.00 | -1.00/ -14.5 | -1.00 | -1.00 |
| D23 (fast polarity) | -1.00 | -1.00/ -5.0 | 1.00 | +1.00 |
| D20 (slow polarity) | -1.00 | -1.00/ -5.0 | 1.00 | +1.00 |
| D24 (slow option) | off | Off | -1.00 | -1.00 |
| Lift D28 (slow comp) | 3.80 | 3.98/ -14.5 (phase offset) | -1.00 | -1.00 |
| D29 (slow boost) | 3.84 | 4.12/ -14.5 (phase offset) | -1.00 | -1.00 |
| D30 (slow filter) | -1.00 | -1.00/ -5.0 | -1.00 | -1.00 |
| D25 (slow bypass) | -1.00 | -1.00/ -5.0 | 1.00 | +1.00 |
| D27 (slow offset enable) | -1.00 | -1.00/ -5.0 (change offset with slow offset D38) | -1.00 | -1.00 |
| D27 and D26 (slow 5V offset) | 1.00 | -1.00/ -5.0 (5 V offset) | -1.00 | -1.00 |

Latching

Inject a 100Hz/1Vpp Sine wave to IN1. Toggle Down LE switch (P1/11 latch enable). Measure and Record the voltage at SERVO.

Toggle D12 Down (IN1 1 enable) and make sure the signal at the output stays on all the time.

Return LE switch and D12 switch to default positions.

| | |
|-------|----------|
| SERVO | 1.92 Vpp |
| Check | ✓ |

Excitation B

Inject a 100Hz/1Vp **Sine wave** to IN1. **Measure** the voltage at B:TEST1 and B:TEST2 while toggling the switches **Down**. Tolerance is +/-0.5dB.

| Binary input | B:TEST1 | Nominal Vp | B:TEST2 | Nominal Vp |
|------------------------------|---------|------------|---------|------------|
| — | -1.0 | -1.00 | +1.0 | 1.00 |
| Lift D22 | off | Off | off | Off |
| D49 (fast/slow) and lift D22 | -1.0 | -1.00 | +1.0 | 1.00 |

Inject a 100Hz/1Vp **Sine wave** to B:EXC. **Measure** the voltage at OUT1 and SERVO while toggling the switches **Down**. Tolerance is +/-0.5dB.

| Binary input | OUT1 | Nominal Vp | SERVO | Nominal Vp |
|-------------------------|------|------------|-------|------------|
| — | off | Off | off | Off |
| D47 (exc. enable) | off | Off | 0.10 | 0.10 |
| D47 & D48 (fast option) | off | Off | off | Off |
| D47 & D49 | 0.10 | 0.10 | off | Off |
| D47, D49, & D24 | off | Off | off | Off |

Limiter

Inject a 100Hz/10Vpp **Sine wave** to IN1. **Measure** the voltage at SERVO while toggling switch D31/35 **UP** (on the tester, red is on and green is off for this switch). The measured voltage should be within 25% of the nominal value.

| Binary input | Measured Vpp | Nominal Vpp |
|--------------------|--------------|-------------|
| - | 19.4 | 20.0 Vpp |
| D31 (fast limiter) | 7.80 | 6.6 Vpp |

Gain slider C

Inject a 100Hz/1Vp **Sine wave** to IN1. **Measure** the voltage at SERVO while toggling the switches **Down**. Tolerance is +/-0.5dB.

| Binary input (slider gain) | Measured Vp | Nominal Vp |
|----------------------------|-------------|------------|
| — | 1.00 | 1 |
| D41 (1dB) | 1.11 | 1.12 |
| D42 (2dB) | 1.21 | 1.26 |
| D43 (4dB) | 1.56 | 1.59 |
| D44 (8dB) | 2.44 | 2.51 |
| D45 (16dB) | 6.20 | 6.31 |
| D44 & D45 (24dB) | 14.00 | 15.9 |
| D46 (-32dB) | 0.0252 | 0.025 |
| D46 & D44 (-24dB) | 0.062 | 0.063 |
| D46 & D45 (-16dB) | 0.156 | 0.159 |
| D46 & D45 & D44 (-8dB) | 0.388 | 0.398 |

EPICS Readbacks

Inject a 1Hz/1Vpp **Sine wave** to IN1. **Observe** analog outputs for a peak to peak value and **Record** the observed voltage.

Inject a 100Hz/1Vpp **Sine wave** to IN1 and **Record** the observed voltage.

**The voltage tolerance is 1 dB (6dB for D34) of the nominal value.

(Red = MC) (Green = ALS)

| EPICS readback | 1Hz | Nominal Vpp | 100Hz | Nominal Vpp |
|-------------------|-------|------------------|-------|-------------|
| D32 (input mon) | -1.00 | -1.00 | 0.082 | 0.080 |
| D33 (split mon) | -1.00 | -1.00 | 0.082 | 0.080 |
| D34 (fast mon) | 9.0 | -0.4 / 7.5 / 7.5 | 0.802 | 0.80 |
| D39 (slow FB mon) | 0.95 | 1.00 | | |
| D40 (output mon) | -0.95 | -1.00 | | |

Limit indicator

Inject a 1Hz/10Vpp **Square wave** to IN1. **Observe** D35 Indicator Light (limit indicator) is **ON** and **Record** the observed voltage. Compare with the nominal response; see Appendix A6.

| | |
|---------------------------|----------|
| D35 Indicator Light Check | ✓ |
| Voltage | 19.6 Vpp |

Inject a 100Hz **Sine wave** to IN1. Increase injected signal amplitude from 0.0V, in 0.1V steps, until D35 Indicator Light goes from high (**ON**) to low (**OFF**). **Record** the observed voltage.

| Binary input | Measured [Vpp] | Nominal [Vpp] |
|--------------|----------------|-----------------|
| — | 6.2 Vpp | Approx. 6.0 Vpp |

Tests Part 2: SR785 Signal Analyzer Tests

Important Notes: 1. Ensure all Common Mode Servo Tester switches are in the default position. 2. Closely Read and follow all On-Screen prompts.

On a Windows operating system laptop, **Create** and **Save** a file called TEST_DATA to C: drive. The path is C:\Test_DATA\.

Save Test Scripts in TEST_DATA.

Connect an SR785 Signal Analyzer to the laptop with a GPIB to Cat5 adapter.

From the DOS CMD window, **Type** cd.. , Enter, **Type** cd.. ,Enter and **Type** cd TEST_DATA.

Type and **Run** 'setgpib.bat' and **Enter** the adapter's IP address (which should be labeled on the adapter).

Reset the SR785's settings with 'resetSR785.bat'. If the SR785 resets when the script is run, the SR785 is properly connected to the PC.

Power Board Noise (SR785PowerBoardNoise.bat)

One pair of probes (MiniGrabbers) are required to **check the noise levels at 140Hz** on the Low Noise Power Board.

In the DOS CMD window, **Type** SR785PowerBoardNoise.

Read and Follow the On-Screen prompts for proper test equipment configuration and procedure.

Record the collected On-Screen data in the boxes below and remove the probes.

** Test values must be less than the values indicated in the table below.

| TP12 | < [nV/√Hz] | TP13 | < [nV/√Hz] | TP11 | < [nV/√Hz] | TP6 | < [nV/√Hz] |
|------|------------|-------|------------|-------|------------|-------|------------|
| 2.86 | 20 | 20.25 | 30 | 14.67 | 30 | 21.41 | 30 |

Monitor Channel Filtering (SR785MonitorTFs.bat)

Ensure all switches are in default positions.

In the DOS CMD window, **Type** SR785MonitorTFs

Read and Follow the On-Screen prompts for proper test equipment configuration and procedure.

Measure test transfer functions from 1Hz to 100Hz on IN1 to the indicated monitor channels on the tester and **Record** the data in the table below.

** Tolerances for Lowpass filtering are +/-1dB and +/-5deg from nominal.

| Boost # | @1Hz | Nominal | @10Hz | Nominal | @100Hz | Nominal |
|---------------------|-----------------|------------------|-----------------|------------------|------------------|------------------|
| Input Mon (D32) | -0.26 163.78 | -0.1dB 173deg | -4.41 127.62 | -4.1dB 129deg | -22.34 94.55 | -22dB 95deg |
| Split Mon (D33) | -0.35 172.88 | -0.1dB 173deg | -4.43 128.3 | -4.1dB 129deg | -22.86 91.0 | -22dB 95deg |
| Fast Mon (D34) (CM) | / | -8.8dB 150deg | / | 10.5dB 5deg | / | -2.5dB -79deg |
| D34 (MC/ALS) | 19.36 -7.2 | 19.9dB -7deg | 15.27 -51.72 | 15.9dB -51deg | -2.66 -85.99 | -2.0dB -85deg |
| FB Mon (D39) | -0.57 -7.26 | -0.1dB -7deg | -4.66 -51.77 | -4.1dB -51deg | -22.69 -81.32 | -22dB -85deg |
| Output Mon (D40) | -0.57 172.78 | -0.1dB 173deg | -4.65 127.13 | -4.1dB 129deg | -22.97 86.43 | -22dB 95deg |

Ensure all Common Mode Servo Tester switches are in default positions.

Adjustment Channel Filtering (SR785AdjustmentTFs.bat)

Type SR785AdjustmentTFs

Test the transfer functions from 1Hz to 10kHz on the indicated adjustment channels on the tester to OUT1. **Toggle Down D27 when testing D38.** Verify filtering of at least -60dB at 100Hz for each channel and **Record** levels below in the boxes below.

Return switch D27 to default position.

| | | | | | |
|------------------|--------|-------------------|--------|-------------------|--------|
| Offset Adj.(D36) | -92.48 | Offset Adj. (D37) | -88.10 | Output Adj. (D38) | -79.77 |
|------------------|--------|-------------------|--------|-------------------|--------|

Distortion (SR785DistortionMeasurement.bat)

Reset SR785. Type resetSR785. Type SR785DistortionMeasurement

Inject a 1kHz/1Vrms sine wave to IN1. Follow the on-screen prompts. The THD values are displayed after closing the graphics display window. **Repeat** the measurement for IN2 (**D13 Down (ON) and D12 is Down (OFF)**). **Record** the measurements below.

Return D12 and D13 to the default positions.

| | IN1 | SERVO | IN2 | SERVO |
|---------------------------------|--------|--------|--------|--------|
| Total Harmonic Distortion (THD) | -83.69 | <-70dB | -79.69 | <-70dB |

Noise Spectra (SR785NoiseMeasurements.bat)

Ensure all switches are in Default positions. Reset the SR785. Type resetSR785.

Type SR785NoiseMeasurements and **Press Enter.** Follow the displayed script.

Terminate IN1 and IN2 using 50 ohm terminations. **Record** the values at 100Hz, 1kHz and 10kHz in the table below.

| Frequency | OUT1 | < [nV/√Hz] | OUT2 | < [nV/√Hz] | SERVO | < [nV/√Hz] |
|-----------|-------|------------|-------|------------|-------|------------|
| 100Hz | 30.70 | 40 | 21.60 | 30 | 42.00 | 50 |
| 1kHz | 16.30 | 30 | 18.80 | 30 | 36.60 | 40 |
| 10kHz | 7.40 | 30 | 18.50 | 30 | 33.70 | 40 |

Basic Transfer Functions (SR785BasicTFs.bat)

Ensure all switches are in default positions. Type SR785BasicTFs and Press Enter

Sweep the frequency from 100kHz down to 1Hz with 100mV source amplitude and Measure the transfer function from IN1 to OUT1, from IN1 to SERVO and from IN2 to OUT2. Record the values at 10Hz, 100Hz, 1kHz, 10kHz and 100kHz in the table below. See Appendix A2 for typical examples.

** Tolerances must be within 1dB and 5deg of nominal. See Appendix A2 for typical examples.

| OUT1/IN1 | dB | Nom (CM MC ALS) | deg | Nom (CM MC ALS) |
|----------|--------|------------------------|--------|----------------------|
| 1Hz | -0.51 | 0.0dB 14.0dB 0.0dB | 179.95 | 180deg 180deg 180deg |
| 10Hz | -0.53 | 0.0dB 14.0dB 0.0dB | 178.65 | 180deg 180deg 179deg |
| 100Hz | -0.76 | 0.0dB 14.0dB -0.2dB | 168.0 | 180deg 177deg 169deg |
| 1kHz | -7.99 | 0.0dB 13.0dB -7.0dB | 114.9 | 180deg 153deg 117deg |
| 10kHz | -27.15 | 0.0dB -0.2dB -26.0dB | 91.65 | 175deg 102deg 94deg |
| 100kHz | -46.86 | -3.0dB -20.0dB -46.0dB | 86.47 | 130deg 86deg 85deg |

| SERVO/IN1 | dB | Nom (CM MC ALS) | deg | Nom (CM MC ALS) |
|-----------|-------|---------------------|--------|------------------------|
| 1Hz | -0.48 | -28.3dB 0.0dB 0.0dB | -179.9 | -23deg -180deg 180deg |
| 10Hz | -0.48 | -1.9dB 0.0dB 0.0dB | -180.0 | -127deg -180deg 180deg |
| 100Hz | -0.48 | 0.0dB 0.0dB 0.0dB | -180.0 | -174deg -180deg 180deg |
| 1kHz | -0.48 | 0.0dB 0.0dB 0.0dB | -180.0 | -180deg -180deg 180deg |
| 10kHz | -0.48 | 0.0dB 0.1dB 0.0dB | -180.0 | 89deg -177deg 89deg |
| 100kHz | -0.48 | 0.0dB 3.0dB 0.0dB | -190.1 | 81deg -170deg 81deg |

| OUT2/IN2 | dB | Nom (CM MC ALS) | deg | Nom (CM MC ALS) |
|----------|-------|-------------------|--------|----------------------|
| 1Hz | -0.28 | 0.0dB 0.0dB 0.0dB | -179.9 | 180deg 180deg 180deg |
| 10Hz | -0.28 | 0.0dB 0.0dB 0.0dB | -180.0 | 180deg 180deg 180deg |
| 100Hz | -0.28 | 0.0dB 0.0dB 0.0dB | -180.0 | 180deg 180deg 180deg |
| 1kHz | -0.28 | 0.0dB 0.0dB 0.0dB | -180.0 | 180deg 180deg 180deg |
| 10kHz | -0.28 | 0.0dB 0.0dB 0.0dB | -180.3 | 180deg 180deg 180deg |
| 100kHz | -0.28 | 0.0dB 0.0dB 0.0dB | -183.5 | 177deg 177deg 177deg |

Transfer Functions of Boost Gain Stages (SR785BoostGainTFs.bat)

Type SR785BoostGainTFs and Press Enter.

Note: 1. Switch D5 must be **Down** (low) for **all** measurements.
 2. All other switches are in default unless prompted otherwise
 3. If DC Bias is not properly adjusted, these tests will fail.

It is also possible to measure these boost stages by using TP3, TP8, TP9, TP10 and TP11A. See Appendix A4 for typical examples.

** Tolerances must be within 1dB and 5deg of nominal.

| Boost # | @10Hz | Nom | @100Hz | Nom | @1kHz | Nom |
|----------------------|-----------------|------------------|-----------------|------------------|-----------------|------------------|
| Reference | -32.44@ | -181.1 | -32.65@ | -192.0 | -39.86 @ | -245.11 |
| Common Comp. (D17) | 39.66 -14.54 | 39.7dB -14deg | 31.11 -67.53 | 31.4dB -67deg | 12.03 -73.43 | 12.3dB -74deg |
| 1. (D15) | 25.76 -0.89 | 26.3dB -1deg | 25.75 -6.57 | 26.3dB -5deg | 21.97 -46.13 | 23.4dB -42deg |
| 2. (D16) | 25.65 -0.62 | 26.3dB -1deg | 25.60 -6.49 | 26.3dB -5deg | 21.87 -46.1 | 23.4dB -42deg |
| 3. (D15+D16) | 23.04 -1.64 | 23.5dB -2deg | 22.6 -17.8 | 23.1dB -17deg | 12.38 -60.62 | 12.9dB -61deg |
| Lift D28 (slow comp) | 31.34 -68.5 | 31.3dB -68deg | 12.36 -85.76 | 11.9dB -88deg | -0.0 -89.68 | -8.1dB -90deg |
| D29 (slow boost) | 31.23 -67.28 | 31.4dB -67deg | 12.11 -73.75 | 12.3dB -74deg | 0.51 -21.43 | 0.6dB -22deg |

Transfer Functions of DAQ Channels (SR785DAQTFs.bat)

Return all switches to default positions. Type SR785DAQTFs and Press Enter.

Measure the transfer function from SR785 CH1 A to D0901781 Monitor jack (DAQ channels). Sweep the frequency from 10kHz down to 1Hz at 1mV source amplitude. Record the values at 1Hz and 10kHz in the table below. See Appendix A5 for typical examples.

** Tolerances must be within 1dB and 5deg of nominal.

| Frequency | 1Hz | Nominal | 10kHz | Nominal |
|-----------|---------------|--------------|---------------|---------------|
| IMON | 45.72, 0.09 | 45dB, 0deg | 45.68, -1.61 | 45dB, 0deg |
| FMON | 5.36, -168.86 | 5dB, -170deg | 45.40, -183.8 | 45dB, -180deg |
| SMON | 45.39, -169.2 | 5dB, -170deg | 45.39, -184.0 | 45dB, -180deg |

Tests Part 3: 4395A Network/Spectrum Analyzer

Connect the 4395A in a similar fashion to the SR785, with a GPIB to Cat5 adapter.

Note: The model used must be a 4395A. Script was specifically written for the 4395A.

High Frequency Transfer Function (AG4395AHighFreqTF.bat)

Ensure D5 is in the default position.

Type AG4395AHighFreqTF

Use a network analyzer to measure the transfer function from IN1 to SERVO. Sweep the frequency from 10MHz down to 10kHz with -20dBm source. To remove cable delays first measure the transfer function against a BNC barrel and use as a reference. **Record** the displayed values at 100kHz, 300kHz and 1MHz in the table below. Nominal values are given for CM. See Appendix A3 for typical examples.

** Tolerances are within 1dB and 5deg of nominal.

| Frequency | SERVO/IN1 [dB] | Nominal | SERVO/IN1 [deg] | Nominal |
|-----------|----------------|---------|-----------------|---------|
| 100kHz | -0.57 | 0dB | 168.31 | 170deg |
| 300kHz | -0.73 | 0dB | 145.37 | 150deg |
| 1MHz | -1.95 | -2dB | 68.28 | 75deg |